INDICATION AND ACTION

If you notice any signals from the smoke alarm and are unsure of its condition, please refer to the table below for the “LED Indicator” and “Sound” descriptions. This table will help you identify the alarm’s current status and the appropriate action to take.

If you need additional assistance, we recommend contacting our technical support team. Contact details can be found in this manual.

Status	Description	LED Indicator	Sound
Standby Mode	Smoke alarm is operating normally	Red LED flashes once every 48 seconds	None
Fire Alarm Mode	Smoke detected	Red LED flashes once every 1 second	Pulse alarm sound
Test Mode	Press and hold the Test/Hush button to check alarm function	Red LED flashes once every 1 second	Pulse alarm sound until button released
Low Battery Warning	Battery voltage is below the threshold	Yellow LED flashes once every 48 seconds	1 “beep” sound
Fault Mode	Fault detected in the alarm signal	Yellow LED flashes twice every 48 seconds	2 “beep” sounds
Silence Mode	Press the Test/Hush button for 1 second during alarm. Temporarily silence the alarm for approx. 8 minutes	Red LED flashes once every 8 seconds	None
No Disturb Mode	Press the Test/Hush button once during Low Battery Warning or Fault Mode. Temporarily silence the alarm for approx. 10 hours	Red LED flashes once every 48 seconds	None
Alarm Memory	The alarm will indicate it has been triggered within 72 hours	Red LED flashes 3 times every 48 seconds	None
Lifetime Trigger Alarm History	Up to 20 triggered alarm history can be saved in the alarm’s history. Press the Test/Hush button four times within 3 seconds, with each history indicated by a beep and a single Red LED flash	Each Red LED flash indicates one past alarm trigger	Each beep indicates one past alarm trigger
"E" Memory Function	To identify a previous alarm event, press the Test/Hush button two times(The two presses with an interval within 1 second) to activate the 'E' Memory function. The memory will automatically clear after 14 days, or it can be manually reset by turning the alarm off and then back on, memory will reset after one hour	No Red LED flash = No previous event One Red LED flash = Previous low battery signal Two Red LED flashes = Previous fault signal Three Red LED flashes = Alarm triggered	No beep sound = No previous event One beep sound = Previous low battery signal Two beep sounds = Previous fault signal Three beep sounds = Alarm triggered

We recommend the installation of an Emerald Smoke Alarm Controller, which allows you to test, silence and locate triggered smoke alarms without the need to reach up to the alarms on the ceiling.

In any issues persist, contact your retailer.

WARRANTY INFORMATION

K.P.S. AUSTRALIA PTY LTD warrants this smoke alarm to the original purchaser.

K.P.S. AUSTRALIA PTY LTD warrants each new smoke alarm is free from defects in material and workmanship under normal use and service for a period of 10 years from the date of purchase.

This warranty does not cover damage resulting from accident, misuse or abuse or lack of reasonable care of the product.

In no case shall K.P.S. AUSTRALIA PTY LTD be liable for any incidental or consequential damages for breach of this or any other warranty express or implied whatsoever. Faulty product can be mailed to the following address with a detailed explanation of problem.

K.P.S. AUSTRALIA PTY LTD
20 Kikuyu Road, Chevallum QLD, 4555, Australia
support@emeraldalarms.com.au
1300 316 552

2025.07

emerald alarms



SMOKE ALARM USER MANUAL

AS3786:2014

MODEL NUMBER: EVO10M

Thank you for choosing Emerald Alarms.

This leaflet contains important information on the correct installation and operation of your smoke alarm.
Please read all the information before commencing installation and retain for future reference.
This unit has been designed to meet the latest safety standards demanded in Australia and complies with the requirements of AS3786:2014.

MODEL NUMBER	EVO10M
DIMENSIONS	68 x 39.9 mm
WEIGHT	180g
WARRANTY	10 years
MOUNTING OPTIONS	Ceiling or wall mount
POWER - BATTERY	10-year non-replaceable 3V lithium battery
SENSOR	Photoelectric optical chamber
SOUND PATTERN	ISO 8201
ALARM VOLUME	>85dB(A) @ 3m
HUSH/SILENCE TIME	Approx. 8 minutes
NORMAL OPERATING AND STORAGE TEMPERATURE	0°C to 40°C
NORMAL OPERATING AND STORAGE HUMIDITY	≤93% relative humidity (non-condensing)
PACK INCLUDES	Smoke alarm, instruction manual, fixing screws, and mounting plate

DESCRIPTION

This smoke alarm uses advanced photoelectric smoke sensing technology with a dual emitter and single receiver smoke chamber, making it highly sensitive to slow smouldering fires, known for their thick, lingering smoke. This design results in fewer false alarms, offering you peace of mind. Please note this device does not detect flames, heat, carbon monoxide, or other hazardous gases. It offers advanced features and an extended battery life for your convenience and safety.

INSTALLATION LOCATIONS


OPTIMAL ALARM PLACEMENT

For the highest level of protection, we strongly recommend installing multiple combination alarms in your home. Each alarm serves a specific purpose and adheres to certain rules and regulations.


To ensure proper installation, we advise following the state based regulations and installation requirements.

The following graphs illustrate some best practices for alarm placement:

SINGLE STORY DWELLINGS

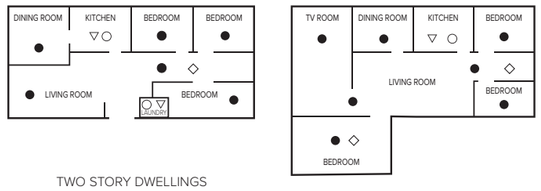

TWO STORY DWELLINGS

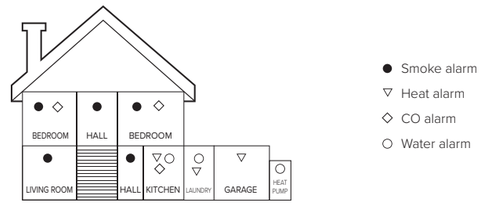

Note: These graphs are for illustrative purposes only and may not cover all potential scenarios. It is essential to assess your home’s layout and potential risks to determine the most effective alarm placement.


LOCATIONS TO AVOID

1. Don't place alarms in areas prone to steam, condensation, or exposure to normal smoke and heat from appliances, such as bathrooms, kitchens, and garages. These conditions may trigger false alarms.
2. In spaces with high humidity, like bathrooms or areas near dishwashers or washing machines, ensure the alarm is installed at least 3 meters away from these sources of moisture.
3. Keep alarms at least 1 meter away from air returns or heating and cooling supply vents. Airflow from these vents can disrupt the smoke detector's performance by blowing smoke away from it.
4. Do not install alarms in rooms where the temperature may drop below 0°C or exceed 40°C, as extreme temperatures can lead to nuisance or trigger false alarms.
5. Avoid placing alarms in extremely dusty, dirty, or insect infested areas, as particles in these environments may interfere with the proper operation of the alarm.
6. Away from air conditioning or ventilation grilles/louvers.

POSITION OF SMOKE ALARMS


Smoke will spread horizontally after rising to the ceiling so it's advisable to install the smoke alarm in the centre of the ceiling where possible. Avoid areas where there is no circulation.

- When mounting an alarm on the ceiling, locate it a minimum of 30cm from the side wall.
- When mounting an alarm on the wall, position it a minimum of 30cm from the corner and a maximum of 50cm below the ceiling.
- Install smoke alarm/s on slopped, peaked or cathedral ceilings between 50cm and 150cm from the highest point of the ceiling.

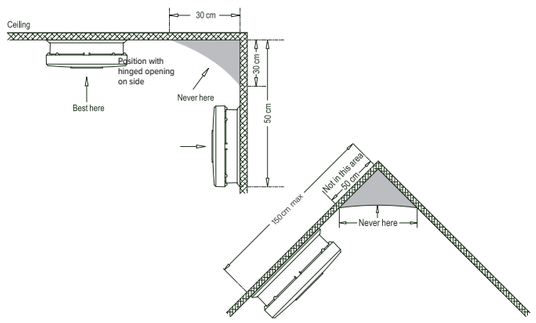

ASSEMBLY AND INSTALLATION

Secure the mounting plate to the ceiling using the supplied screws, then assemble the smoke alarm onto the mounting plate.

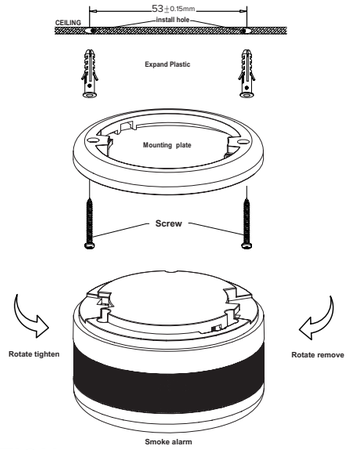

ACTIVATION

Simply rotate and click the alarm into place on the mounting plate. When you hear the satisfying click, you'll hear a "beep" sound and the Red LED light up once, indicating the alarm is activated.

OPERATION AND TESTING

Smoke alarms are an important safety device in the home therefore it is important to check them regularly to ensure they are operating correctly.

Regular Mode
When there is no smoke present, the red LED should flash every 48 seconds indicating the alarm is operating correctly.

Alarm Mode
When the alarm detects smoke, the red LED will flash once per second and the alarm will sound loudly. The flashing LED and alarm will continue until the air is cleared.

Fault Mode
The alarm "chirps" twice with yellow LED flashes twice every 48 seconds.

No Disturb Mode
When the alarm device is in low battery warning or fault mode, to prevent disruptions during night time, press the test button once. This action will mute the chirping for about 10 hours. After this period, the warning chirp will resume. The red LED will flash once every 48 seconds during No Disturb Mode.

TESTING YOUR ALARM

It is recommended that you test your smoke alarm once a month to ensure the smoke alarm is working correctly. Test by pressing and hold the test button. The alarm will trigger if the alarm electronic circuitry and battery are working. If no alarm trigger, the smoke alarm has a defective battery, or another fault. All interconnected alarms will also trigger within 25 seconds.

> **Warning:** Do not use an open flame to test the alarm, as it could damage the unit and pose a fire hazard.

LOW BATTERY POWER

Should your smoke alarm have a low battery the unit will emit an audible 'chirp' once every 48 seconds and the yellow LED light flashes once at the same time. When this occurs you must replace the alarm immediately.

The low battery warning will persist for at least 30 days, but failure to replace the alarm afterward may result in insufficient power to alert you in a real-life emergency. Your smoke alarm relies on a fully operational battery to function effectively.

Note: The battery in this unit is intended to last 10 years and cannot be replaced.

SILENCE ALARM

If your smoke alarm emits the full alarm signal and you are not testing the unit, the smoke alarm is warning you of a potentially dangerous situation that requires your immediate attention. Only use the alarm silence function after making sure that there is no ongoing fire emergency situation.

Do not block the vents on the alarm or disable the smoke alarm in any way as this will remove your protection.

Smoke alarms can sometimes react to cooking fumes or other non emergency situations. In the event of a known false alarm your smoke alarm can be temporarily silenced by pressing the hush button. Your alarm will automatically return to standby mode after 8 minutes.

1. Press the Test/Hush button for 1 second during alarm.
2. Your alarm will silence for approximately 8 minutes.
3. The red LED will flash every 8 seconds indicating it is running in silence mode.
4. Your alarm will automatically return to standby mode on completion of the reset cycle and the red LED will revert to flashing once every 48 seconds.

> **Warning:** Never ignore any alarm. Ignoring the alarm may result in injury or death. If your smoke alarm activates and you are not absolutely certain of the source of the smoke, get everyone out of the house immediately.

ALARM MEMORY FUNCTION

The smoke alarm will remember if it has been triggered for a period of 72 hours. The red LED indicator flashes 3 times every 48 seconds during that period. If smoke alarm has been turned off during this 72 hours period, it will return to standby mode once turned back on.

This alarm also features a lifetime trigger alarm history that tracks triggered history:

Up to 20 triggered alarm events can be saved in the alarm's history. These can be accessed by pressing the test button four times within three seconds, with each event indicated by a beep and a single red LED flash.

"E" MEMORY FUNCTION

The E Memory function allows the smoke alarm to indicate if a previous alarm event has occurred.

Press test button twice within one second:
No beep sound = No previous event
One beep sound = Previous low battery signal
Two beep sounds = Previous fault signal
Three beep sounds = Alarm triggered

The alarm memory will automatically clear after 14 days. Alternatively, the memory can be reset by switching the alarm off and back on after one hour.

MAINTENANCE AND CLEANING

Like other electrical accessories in the home, smoke alarms require maintenance to ensure efficient and effective operation.

Proper maintenance can also reduce the likelihood of false alarms.

1. In addition to monthly testing, the alarm requires regular cleaning to remove dust, dirt, or debris.
2. Using a vacuum cleaner with the soft brush vacuum all sides and cover of the device.

NOTE: Do not attempt to remove the cover to clean inside. This will affect warranty.

HOW TO DEACTIVATE THE SMOKE ALARM

To deactivate, simply disengage the backing plate by rotating and unclicking the alarm. There will be no alarm functions while in this status. You must reactivate the alarm before use. Please refer to "ACTIVATION" to activate the product.

> **Warning:** Deactivating this alarm should only be performed if you need to dispose of the smoke alarm or if you need to cease a nuisance alarm which is caused by a failure of the smoke alarm.

TROUBLESHOOTING GUIDE

PROBLEM	SOLUTION
The smoke alarm isn't making a sound during the test.	• Make sure you activate the alarm before installing it. • Clean up your alarm using the steps in the "Maintenance and Cleaning" section.
The alarm "chirps" once with yellow LED flashes once every 48 seconds.	Low battery alert! Your smoke alarm will warn of a low battery for at least 30 days. Failure to replace the smoke alarm after this time could result in you not being alerted in the case of a fire.
The alarm "chirps" twice with yellow LED flashes twice every 48 seconds.	Fault mode alert! Clean up your alarm using the steps in the "Maintenance and Cleaning" section.
All alarms in my house go into alarm mode while there isn't a fire emergency.	Interconnected alarms can only be silenced by identifying and hushing the triggered alarm. The red flashing LED identifies the triggered smoke alarm, press HUSH/TEST button for 1-2seconds to silence all smoke alarms. Check the " SILENCE ALARM " section for details.